



NEO™

10ft x 10ft / 3m x 3m

SET-UP INSTRUCTIONS

It is recommended to use two people when setting up the NEO™.



1. Standing towards your partner, grasp the corner legs and extend out to arms length while stepping back. Insure that bottom truss elbows are free and not overlapping prior to opening.



6. To secure and tighten top on frame attach the J-hook straps sewn to top in the center on each side around the bottom truss bar.



2. Next, grasp the lower "V" of the truss that you are facing. Lift up the shelter slightly and step back until the unit is halfway open.




7. Adjust the legs to the desired setting by pushing the release buttons and pull out lower part of leg raising canopy.



3. Place fabric top on frame. Match up the hook and loop on the corners of the cover with the hook and loop at the top of legs. Make sure the center peak of canopy fabric is centered over the peak pole.



8. Use the stakes to secure the feet at each leg position. If additional securing is needed, use the guy ropes and tie them to the top at the corners and use the stakes with hooks to anchor the bottom. These should be placed about 3 feet away from each leg.

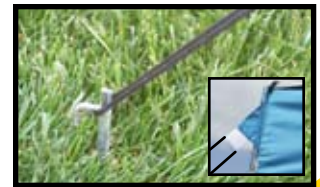


4. Pull the frame completely out until all sliders are locked at each corner on each leg. You will have to push up on sliders to get them to lock in place. You may need to move around unit pulling and opening until completely open and locked.

TAKE DOWN INSTRUCTIONS





5. With a helper, one should go to opposite legs on one side of the canopy and extend the legs by pushing the leg adjust button and pulling out the lower leg. Use your foot on bottom of leg to start the extension, then use your hands. This will allow the leg to extend smoothly. Repeat this step on the other side.

1. Unhook the J-hook straps holding top on.
2. Lower the legs by pushing leg release buttons and allowing the lower part of leg to slide into upper part.
3. Push in top release button to release the framework top at each corner. Failure to release this button may damage frame when you attempt to close.
4. Remove and fold top. Remove the top after each use and store in the pocket provided on the carry bag. Never store wet. This is recommended to prevent small rips and tears. Make sure the canopy top is dry before storing.
5. Grasp the top "V" and fold in completely. Move from side to side as necessary. Careful, Watch Your Fingers.
6. Insert the legs into carry bag first then close with zippers.

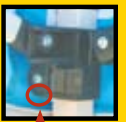

NOTE: Should the leg or top release fitting be difficult to lock and unlock there is a small adjustment screw on the bottom of the fitting that can be loosened slightly to ease the fittings operation.

SEE REVERSE SIDE FOR CARE AND WARRANTY.

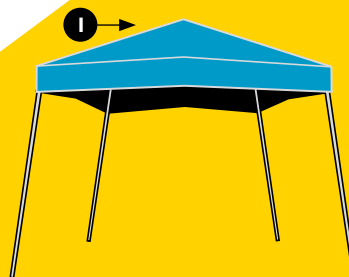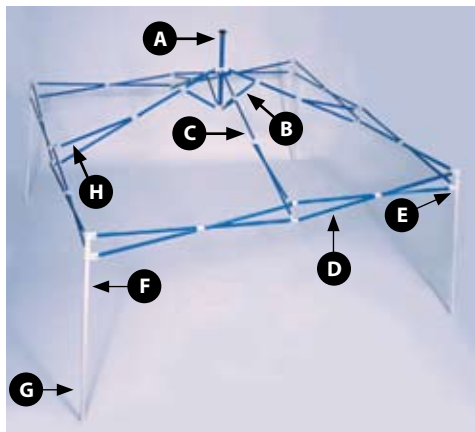

Specify unit size when ordering parts.
Call 1-800-800-6296

- A. Peak assembly (1) Includes: Upper and lower peak poles with peak cap and peak sliders
- B. Peak Truss (4)
- C. Center Truss (4)
- D. Perimeter Truss (16)
- E. Leg Slider (4)
- F. Upper Leg (4)
- G. Lower Leg (4)
- H. Center Truss Arm (4)
- I. Replacement Top for 10'x10'

King Canopy Brand Products
1730 Five Points Lane
Fuquay-Varina, NC 27526
Phone: 1-800-800-6296
www.kingcanopy.com





King Canopy Brand Products
1730 Five Points Lane
Fuquay-Varina, NC 27526
Phone: 1-800-800-6296
www.kingcanopy.com



NEO™

10ft x 10ft / 3m x 3m

Please read instructions completely before setting up your instant canopy.

WARRANTY INFORMATION

Please do not return canopy to store during warranty period.

For assistance please call our Service Department at: 1-800-800-6296 between the hours of 8:00am – 5:00pm EST, Monday – Friday.

King Canopy warrants canopy to be free of any defects in materials and workmanship for a period of 1 year from date of original purchase. All warranty claims require proof of purchase and may be prorated. King Canopy is not responsible for any damage due to wind, rain, snow or any act of nature. Under NO circumstances shall manufacturer or authorized representative be liable for any personal loss, injury, or direct consequential damage resulting from use of this product.

Non-Warranty Replacement Parts

If after expiration of the warranty period, you require replacement parts please contact us at 1-800-800-6296. We stock replacement parts and make them available to you at discounted prices. Our customer service department will be pleased to assist you in any way possible.

Certain regions of the country are extremely hard on covers of any kind. Normal wear and tear is not covered under the warranty, and should be expected.

In order to receive a discounted or free replacement part, you may be asked to return the part, freight prepaid, to our warehouse for inspection before we will send a replacement. You must, in all cases, provide a copy of your receipt showing the date of purchase, model number and price.

Replacement parts and customer service is also available through our website. Please visit us at www.kingcanopy.com

SAFETY AND CARE INFORMATION

- 1 Always use common sense.
- 2 Do not use your canopy as a permanent cover.
- 3 It is designed for temporary use only. Damages due to weather conditions are not warranted.
- 4 Do not set up on a steep incline. Do not leave unattended.
- 5 Never set up in windy, rainy, or snowy conditions. Canopy is not intended to serve as protection from such conditions. Use for shade only. Disassemble and properly store your Canopy after each use.
- 6 Do not let snow or rain accumulate on top. It will collapse.
- 7 Always use an anchoring system. Your canopy will take flight in windy conditions. Anchoring is your responsibility. Damage due to weather conditions are not warranted.
- 8 Keep your canopy away from all fire sources, such as grills or fire pits.
- 9 Do not machine wash your top. Wash with mild soap and water with a brush while the Instant Canopy is open without the legs extended. Do not use harsh detergents, abrasives or bleach.
- 10 Do not put your Instant Canopy away while wet or damp. This promotes mildew and rust. Always store completely dry.
- 11 For best results in keeping your top clean and to avoid small rips and tears, it is recommended that the top be removed and stored in the carry bag after each use.
- 12 **Never leave your canopy unattended!**



WARNING!

Keep all flame and heat sources away from this tent fabric. This tent is made with fabric that meets CPAI-84 Section 6 specifications for flame resistance. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.