

HC1827PC-24 18X27 HERCULES CANOPY INSTRUCTIONS



6X6-2HTB = 12 pc 78 inch Pipe with Buttons



 
6X6-2HT = 20 pc 78 inch Pipe



3X2-2HT = 10 pc 38 inch Swage Pipe




4W2HTB = 9 PC 3W2HTB = 6 PC FOOT2HT = 10 PC
4-way fitting 3-way fitting foot pads



TFC1827W = 18x27 ft White Fitted Cover



 CCLIP2 = 10 pc Curtain Clips



BALLW = 28 PC Ball Bungee (Elastic)




BALL-ROPE = 6 pc


WARNING:

Keep all flame and heat sources away from this tent fabric. Meets the flammability requirements of CPAI-84. It is not fire proof. The fabric will burn if left in continuous contact with any flame source. For warranty and return authorization information, please visit our support page on our website at www.kingcanopy.com or www.picamericaltd.com

1) Layout Canopy Parts on Ground. Stagger the Short Pipes on Roof for Stronger Roof Joint.

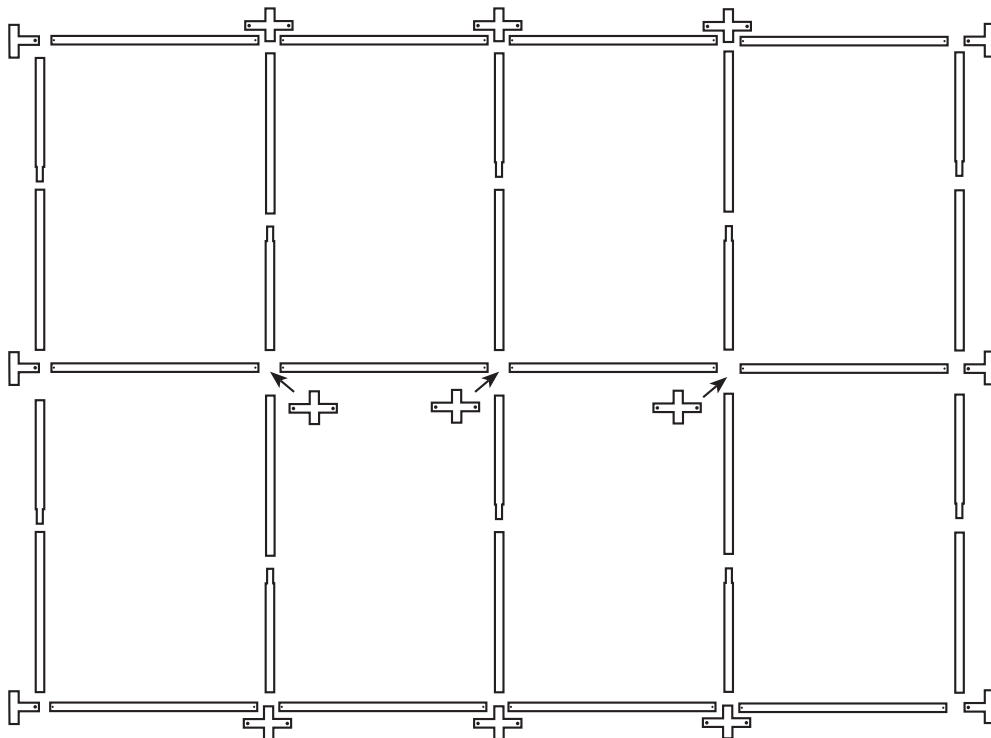


2) Assemble Frame Starting with Center Ridge.

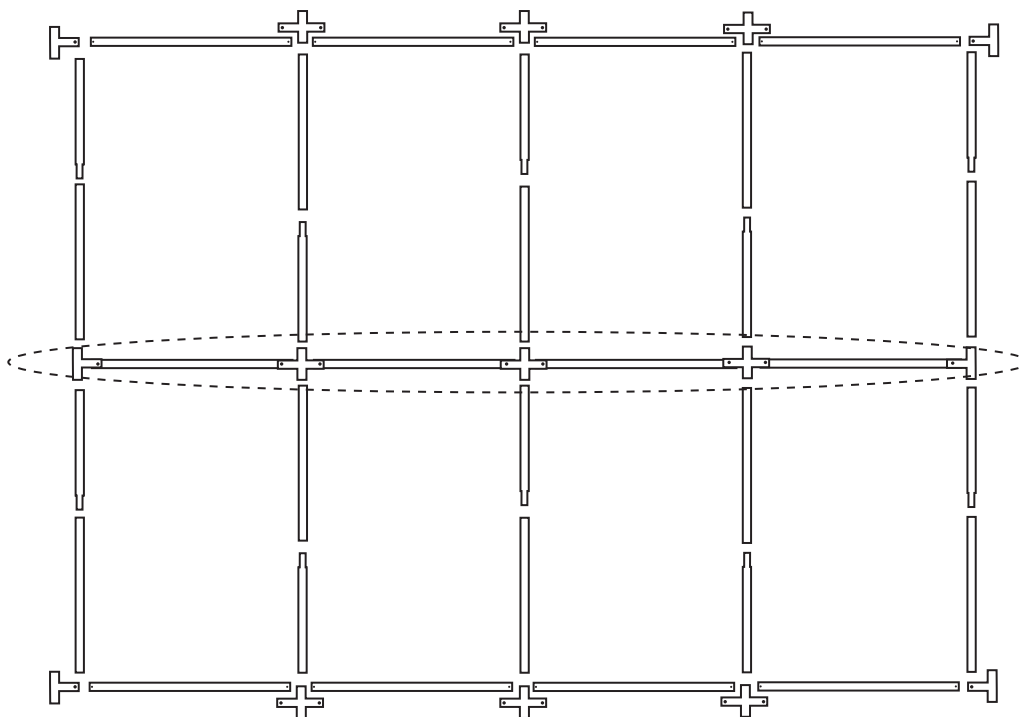


HC1827PC-24 18X27 HERCULES CANOPY INSTRUCTIONS


3) Completed Frame Should Now Look Like This. Place Cover on Ground at One End of the Frame and Pull it Over the Frame as Shown Below.

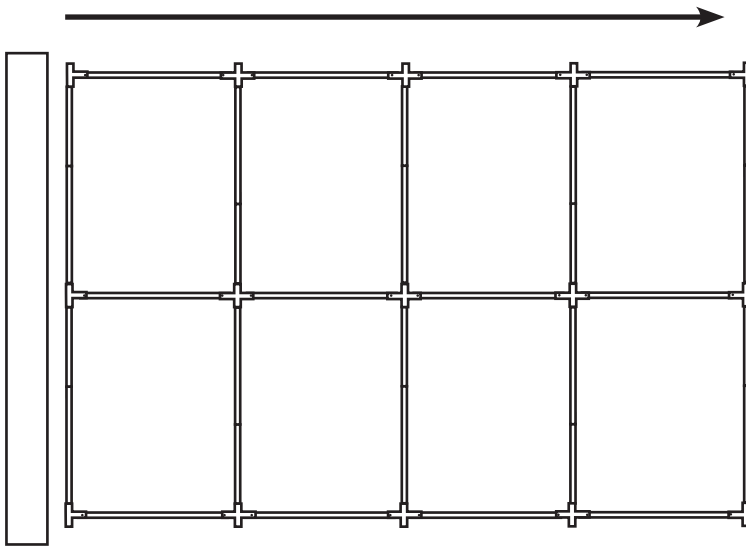


4) Secure the 4 Corners from Underneath with the Corner Straps Sewn in the Corners. Slip a C-Clip on to each the Legs. Lift one Side of the Canopy and Attach the Legs and Foot Pads. Starting with the Center Legs. Attach 10 Ball Bungee Cords located on Underside of Cover to the Frame.

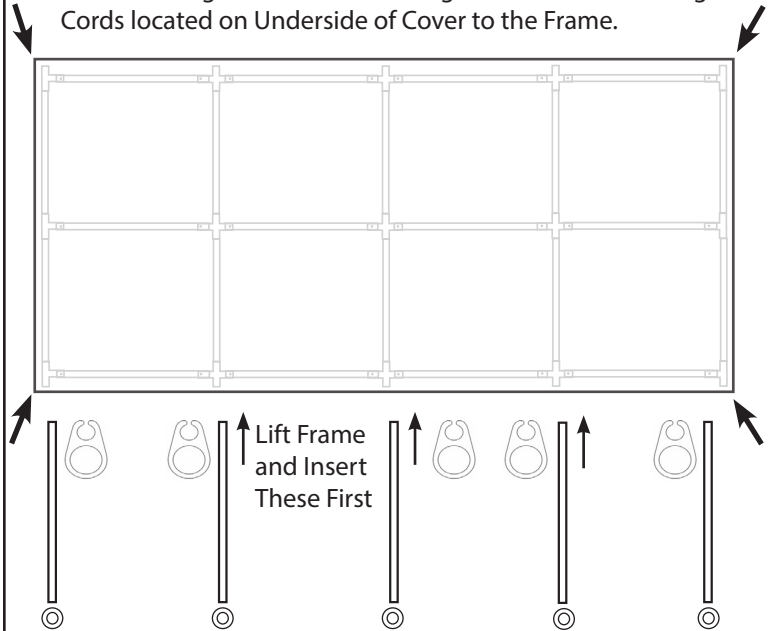

5) Lift the Opposite Side of the Canopy and Attach the Legs and Foot Pads in Same Way. Begin with the Center Legs.

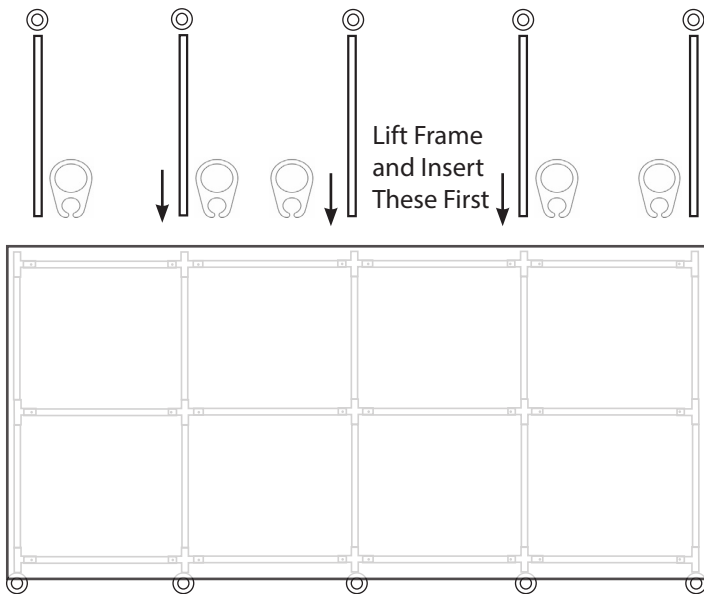

6) Fasten the Drawstring to the C-Clip at Each Corner and Tighten by Pulling the Cord Down and Hooking it on to the C-Clip. Clip the Center Leg Ball-Ropes to the Cover and Secure Them to the C-Clip. Tighten Them by Pulling Down and Hooking on to the C-Clips.

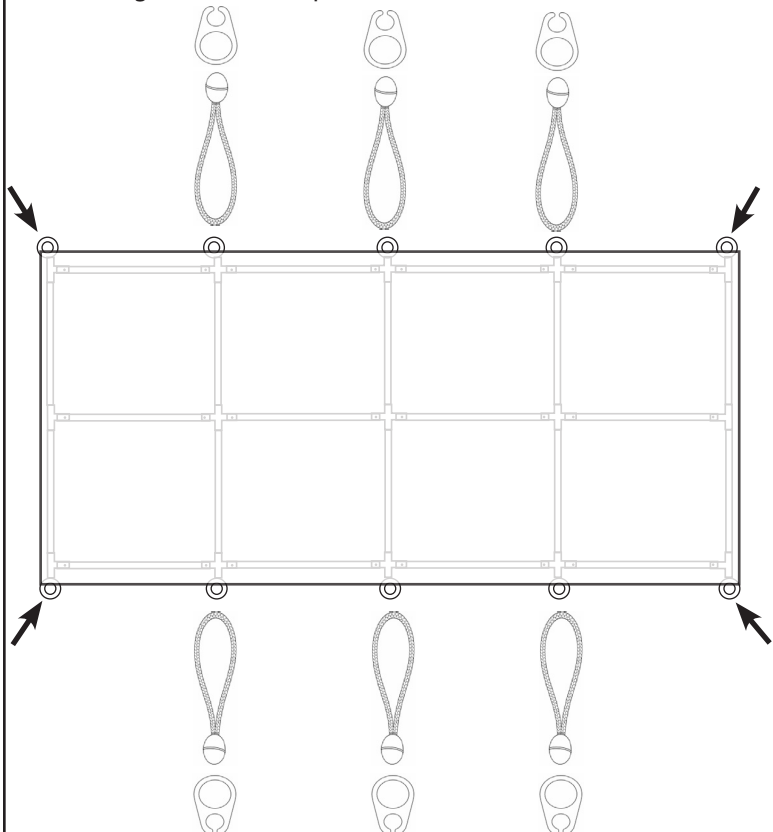

SAFETY & CARE INFORMATION

Always use your best judgment. **DO NOT** use canopy as a permanent cover. They are for **TEMPORARY USE ONLY**. Damages due to weather conditions are not warranted. **DO NOT** set up on a steep incline. Never set up in windy, rainy, or snowy conditions. Canopy is not intended to serve as protection from such conditions. Use for shade only. Disassemble and properly store your canopy after each use. **DO NOT** let snow or rain accumulate on top. Always use an anchoring system. Keep your canopy away from all fire sources. **Never leave your canopy unattended!**

7) Use Elastic Ball Bungee Cords to Fasten Inner Grommets to Perimeter of Frame.

C-Clip Attachment

