



Greenhouse 10ft X 10ft


9ft4in Wide x 10ft3in Deep x 5ft4in Side Height /
7ft10in Center Height



King Canopy Item #: GH1010

With 6 Legs, Cover,
Elastic Ball Straps & Foot Pads.

These Tools Are
Recommended:

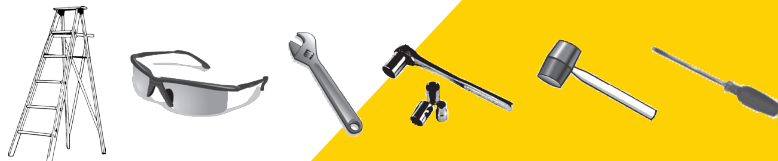




WARNING:

Keep all flame and heat sources away from this tent fabric. Meets the flammability requirements of CPAI-84. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.

Distributed by:
PIC America, LTD.
1730 Five Points Lane • Fuquay-Varina, NC 27526
1-800-800-6296 • www.kingcanopy.com



 
PARTS LIST

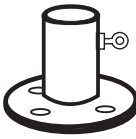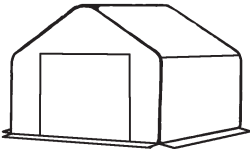5X0PCS	22 pc	60" powder coated pipe	
3WPCS	6 pc	3-way connectors	
4WPCS	3 pc	4-way connectors	
BALLW	15 pc	Elastic ball straps	
FOOTPCS	6 pc	Metal foot pads	
GH1010T	1 pc	One piece cover	
DC1313	2 pc	Double pipe clamps w/bolts	
SC1313	4 pc	Single pipe clamps w/bolts	


FRAME ASSEMBLY



1. Separate all pieces according to size and shape and arrange per the illustration shown below. All the pipes are 60" long.

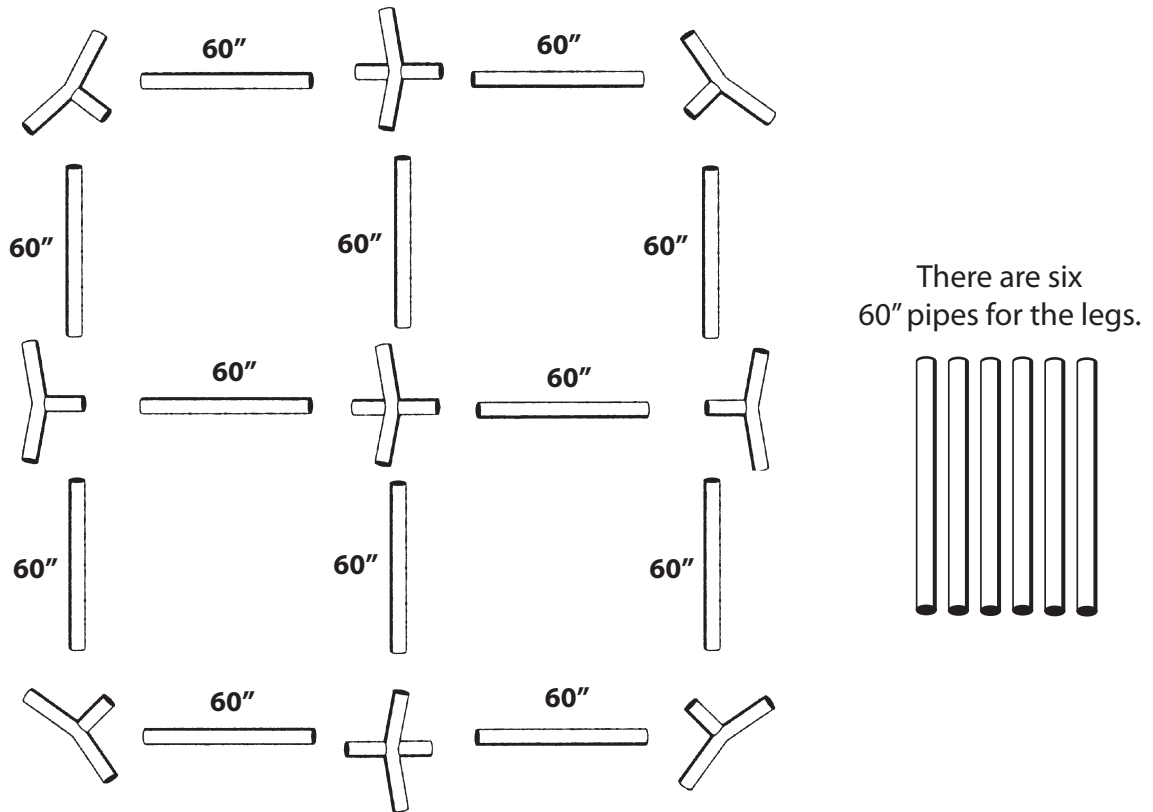

2. Start with the center and complete the center frame first. Then assemble each side.


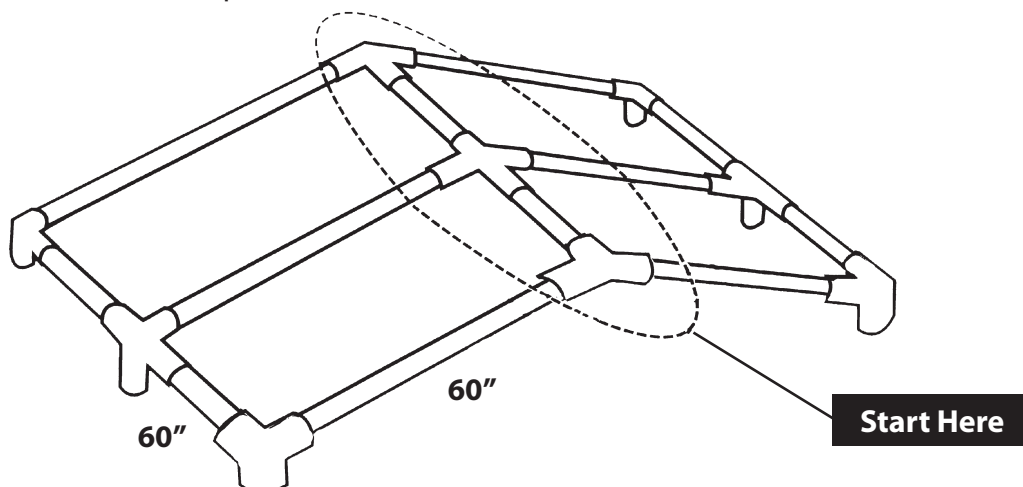


3. Cover installation - Before installing cover, unzip the door on the cover. This will make installation easy and will not cause damage to zippers. Unfold cover and make sure grommets are inside. Place tarp over frame so that the door is located at front of the frame and the window at the rear. Leave the sides of the cover on top of the frame until the legs are installed.




LEGS & COVER ASSEMBLY

1. Lift one side of canopy top and insert legs. Proceed to the other side.

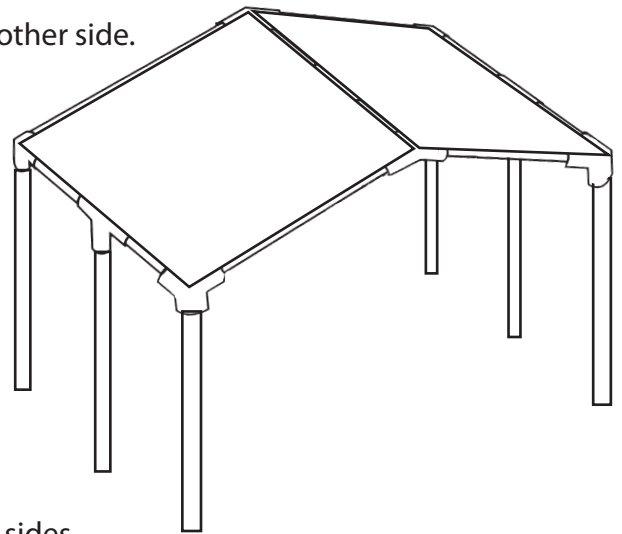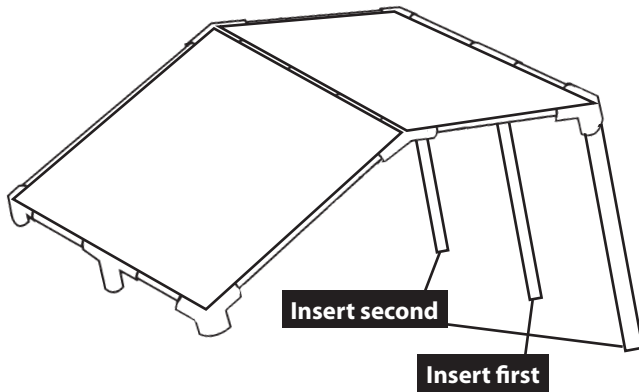

2. Pull sides of tarp down and adjust until it fits equally on all sides.

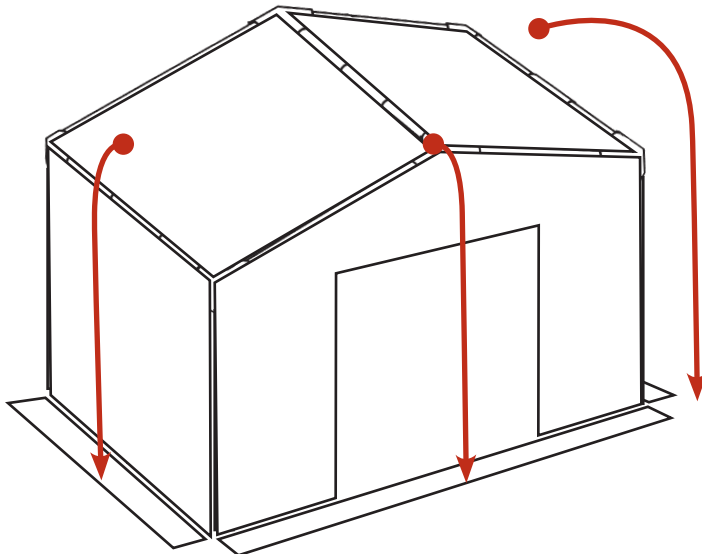

CANOPY REMOVAL:

The best way to remove and fold the cover would be to follow the exact opposite of the installation process. Detach all the ball bungees, unzip the door, slide up the sides and fold them over onto the roof. Disassemble your structure by removing the legs from one side and lowering it. Then you could finish folding up your canopy cover, put it off to the side and finish taking down the structure.

3. Attach the remaining 4 (60") pipes to the legs so the sidewalls can be secured. Pipes will fit flush against the bolts as seen below (Figure 1). Using the single clamps on the corners and the double clamps in the middle.



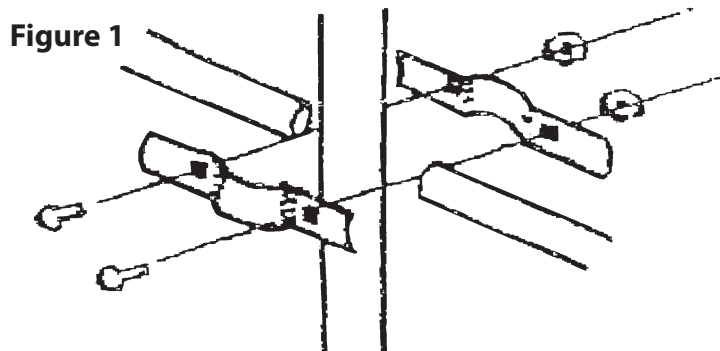


Figure 2

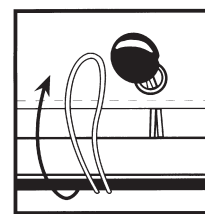

Inside View

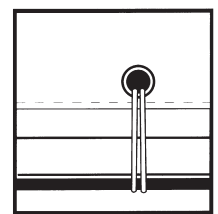

Outside View

4. Place straps through grommets and around sidewall pipe as seen above (Figure 2). Sidewall pipe should then be pulled down until the cover is pulled tight. Then the clamps may be tightened.

LEGS & COVER ASSEMBLY



TO GET A TIGHTER FIT ON CANOPY COVER

The ball straps are long enough to accommodate various cover lengths. If your straps are too long for a tight fit making an additional knot in the strap cord can shorten them.

1. Slide the ball upwards to reveal the tied knot.
2. Tie a new knot above the old one. The length taken up here determines how short the strap becomes.
3. Slip the ball down over the new knot.
4. Cut off the excess cord

ANCHORING YOUR UNIT





After construction, the canopy must be securely anchored to prevent damage from winds. Canopies make excellent kites. If the legs are not anchored, severe winds will cause the frame to flex and unanchored legs will fall, collapsing the canopy. You may wish to bolt all pipe and fittings together.

The best way to anchor your Greenhouse is with screw-in ground anchors and cable/rope attached to each leg or over the frame. You should tie the cable/rope around the slip in fitting on the top of each leg. Mobile home style anchors will work. See your local hardware dealer or Home Supply Center. If you intend to secure your Greenhouse more permanently, you may want to use a heavier cable, such as steel cable. Use the suggested method below to anchor your Green House. If you wish to purchase an anchor kit from King Canopy, call 1-800-800-6296 and ask about our A6200 Anchor Kit.

A large screwdriver can be used to help screw anchors into the ground

Screw anchors in ground close to leg poles and route rope over the side pole leg connectors and tie rope to anchors securely.

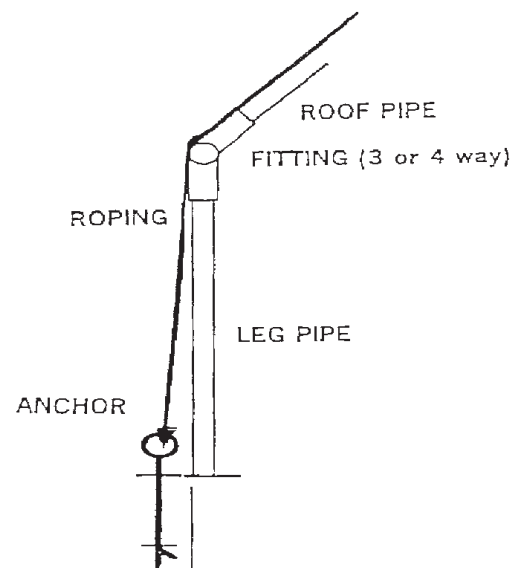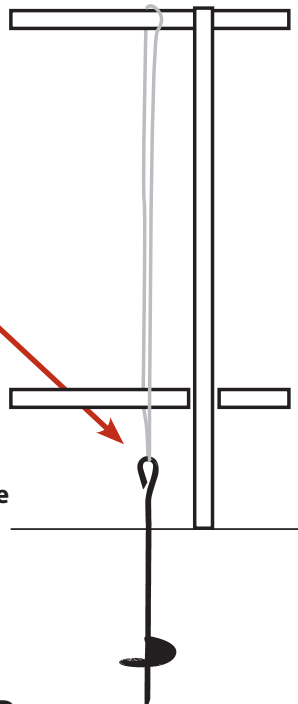

**ANCHOR KIT NOT INCLUDED
WITH THIS CANOPY**



IMPORTANT NOTICE: PLEASE READ CAREFULLY

We are confident that you will be completely satisfied with your King Canopy unit. Please take a moment to read the very important information below, and call us with any questions you may have.

King Canopy/PIC America, LTD. has no control over wind, snow, ice, rain or any other weather condition and we are in no way responsible for any damage caused by the canopy or to the canopy. We suggest you contact your insurance carrier just as you would for any other outside structure.

OTHER PRECAUTIONS WHICH MUST BE FOLLOWED:

Keep all flame and heat sources away from this tent fabric. The tent fabric will burn if left in continuous contact with any flame source.

DO NOT cook underneath or near canopy.

DO NOT store or use flammable liquids underneath or near canopy.

DO NOT ignite or store fireworks underneath or near canopy.

DO NOT use bleach to clean cover.

DO NOT dry clean cover.

DO NOT wash cover in washing machine or dry in dryer. Hand wash with mild soap and water only.

DO NOT allow rain water, snow or ice to accumulate on top of cover.

DO NOT hang or suspend anything from the frame, grommets, truss system or ball straps of the unit.

REMOVE canopy cover before a storm, or disassemble entire canopy unit if possible.

REMOVE rain water, snow and ice from canopy cover.

This is a temporary structure and is not recommended for use as a permanent structure.

PRODUCT INFORMATION



Defective Parts

We try our best to eliminate any defective parts that are shipped with our products. If, however, you should find a defective part, we will replace – free of charge – any part which is defective. You will need to provide proof of purchase showing date of purchase and provide us with detailed description of the defective component. Your replacement will be shipped by ground shipping, freight prepaid. Next day or express shipping will require freight collect and paid for by you, the consumer. Damages from improper anchoring, strong winds, snow, ice or rain are not considered defects.

Improper Anchoring, Strong Winds, Rain Snow, or Ice

King Canopy/PIC America, LTD. does not guarantee these canopies under strong weather conditions. These canopies are designed to protect against damages caused by sun, rain, tree sap, birds, etc. They are not designed to hold roof loads that accompany snow, ice or heavy rains. If your canopy is not anchored securely, it can be lifted by the wind and will fly away. If your canopy takes flight, we are not responsible for any replacement. If you know strong weather is predicted, remove the cover or take down the canopy unit completely. The cover is designed to be quickly and easily removed.

Warranty

All components of this canopy feature a 1-year limited warranty and are warranted to be free from defects in material and workmanship for a period of 1-year. You must complete and return the enclosed warranty card promptly after purchase. Please retain your proof of purchase receipt; you will be asked to provide this receipt in order to obtain warranty service.

Non-Warranty Replacement Parts

If after expiration of the warranty period, you require replacement parts please contact us at 1-800-800-6296. We stock replacement parts and make them available to you at discounted prices. Our customer service department will be pleased to assist you in any way possible.

Certain regions of the country are extremely hard on covers of any kind. Normal wear and tear is not covered under the warranty, and should be expected.

In order to receive a discounted or free replacement part, you may be asked to return the part, freight prepaid, to our warehouse for inspection before we will send a replacement. You must, in all cases, provide a copy of your receipt showing the date of purchase, model number and price.

For missing parts, replacement parts or any questions:

Please Call 8:00am – 5:00pm EST, Monday – Friday
1-800-800-6296 or 1-919-552-2977

Or you can fax us at: **1-919-552-5069**

Replacement parts and customer service is also available through our website.
Please visit us at **www.kingcanopy.com**