

10'X20' Dome Garage

ITEM #: G10208



Dimensions:


10ft. Wide x 20ft. Deep x 8ft. Center Height

WARNING:

Keep all flame and heat sources away from this tent fabric. It is not fire proof. The fabric will burn if left in continuous contact with any flame source.

Distributed by: PIC America, LTD.
8009 Purfoy Road • Fuquay-Varina, NC 27526
1-800-800-6296 • www.kingcanopy.com


PARTS

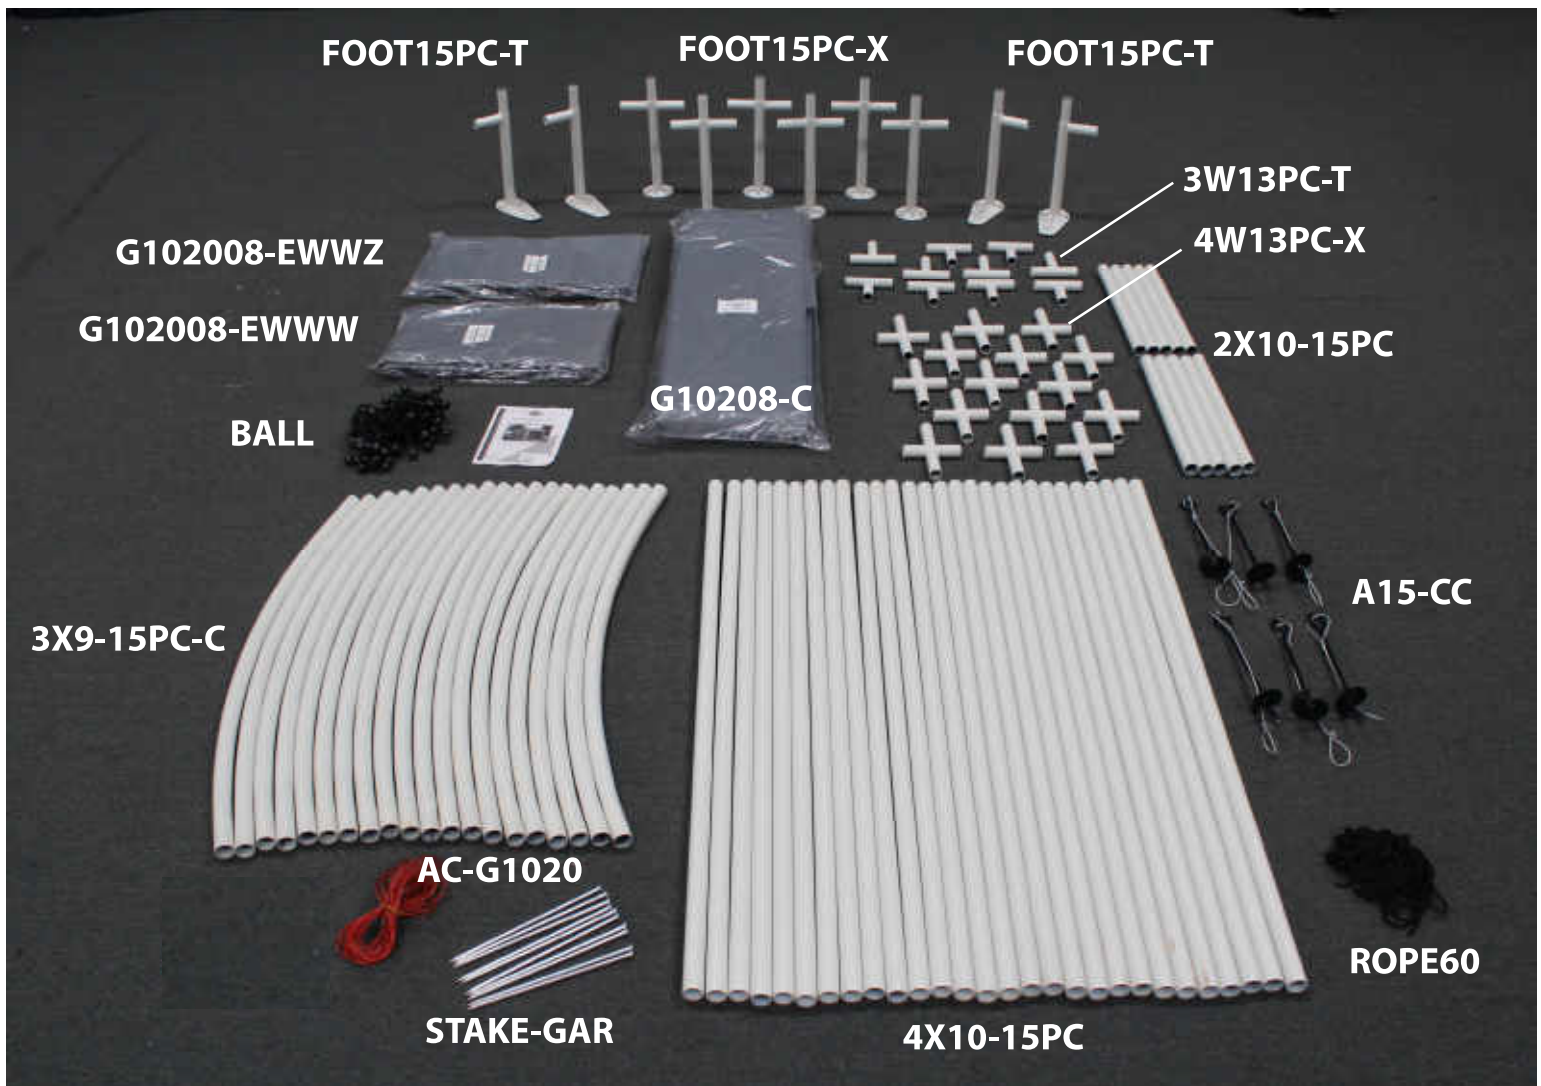

FOOT15PC-T	(4)	2-way Corner Foot Pads
FOOT15PC-X	(6)	3-way Center Foot Pads
3W13PC-T	(10)	3-way Connectors (ends)
4W13PC-X	(15)	4-way Connectors (centers)
4X10-15PC	(28)	58" Pipe
2X10-15PC	(10)	21.5" Pipe
3X9-15PC-C	(20)	45" Curved Pipe
BALL	(70)	Ball Bungee Straps
AC-G1020	(5)	Assembly Cables
ROPE60	(60')	Rope for Assembly
STAKE-GAR	(10)	Stakes
A15-CC	(6)	Screw-in Ground Anchors
G102008-EWWZ	(1)	Front Wall with Zippers
G102008-EWWW	(1)	Back Wall with Window
G10208-C	(1)	Cover

FRAME ASSEMBLY

**FOR FASTER AND EASIER SET-UP,
WE RECOMMEND ASSEMBLY BY TWO OR MORE PEOPLE.**

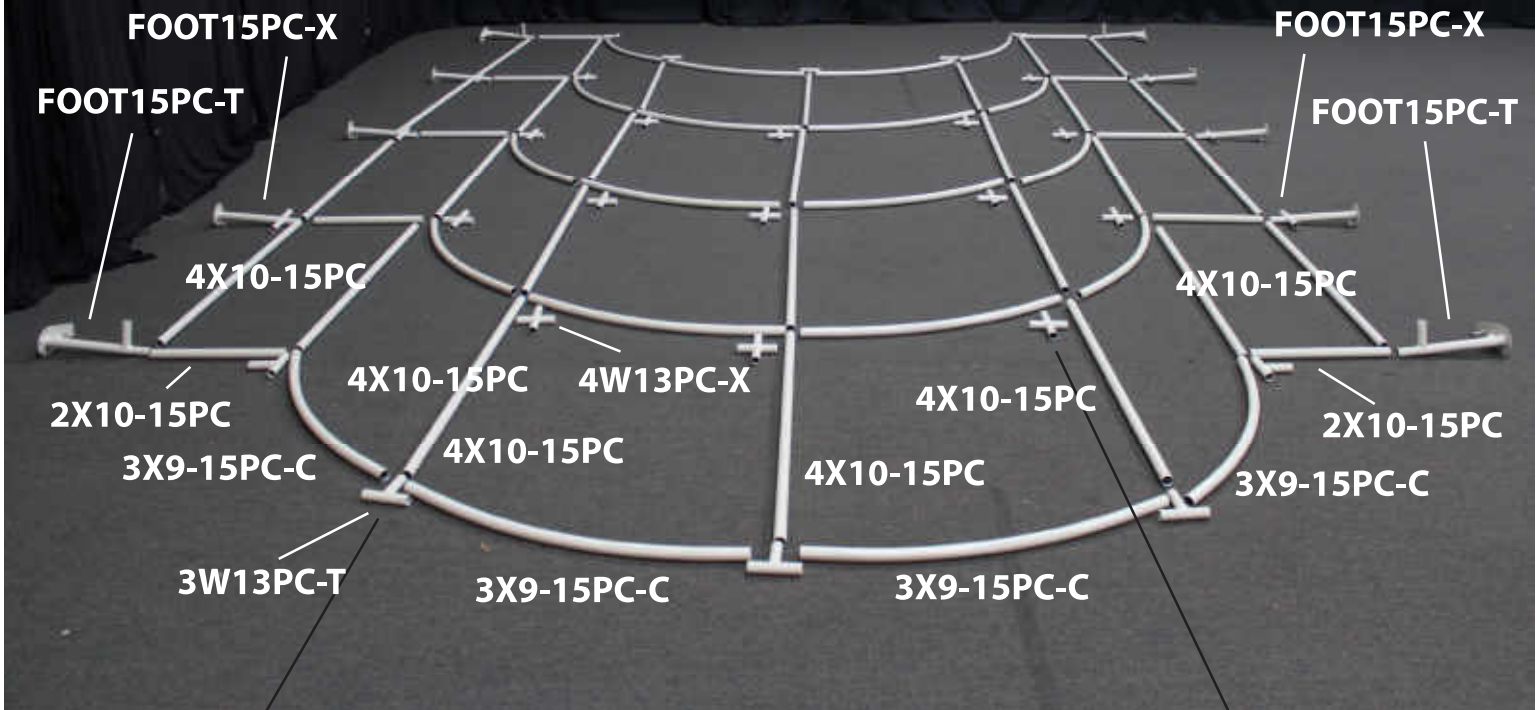

**3-way Connectors
are for each end**


**Note: Longest part of 3-way
is used to form the length.**

**4-way Connectors
are for center
connections**

**Note: The two longest parts
of the 4-way are used to
form the length.**

1) Start by laying out all of the parts and pieces to your King Canopy. Please refer to the parts list to ensure that your kit is complete. When all the parts have been accounted for, begin to layout your frame according to the photo above. The 3X9-15PC-C curved pipes form the dome part of the canopy. The 4X10-15PC pipes form the length of the canopy. Each 3-way fitting (3W13PC-T) should be placed at all the end connections and the 4-way (4W13PC-X) fittings are placed in the 3 center sections.

FRAME ASSEMBLY

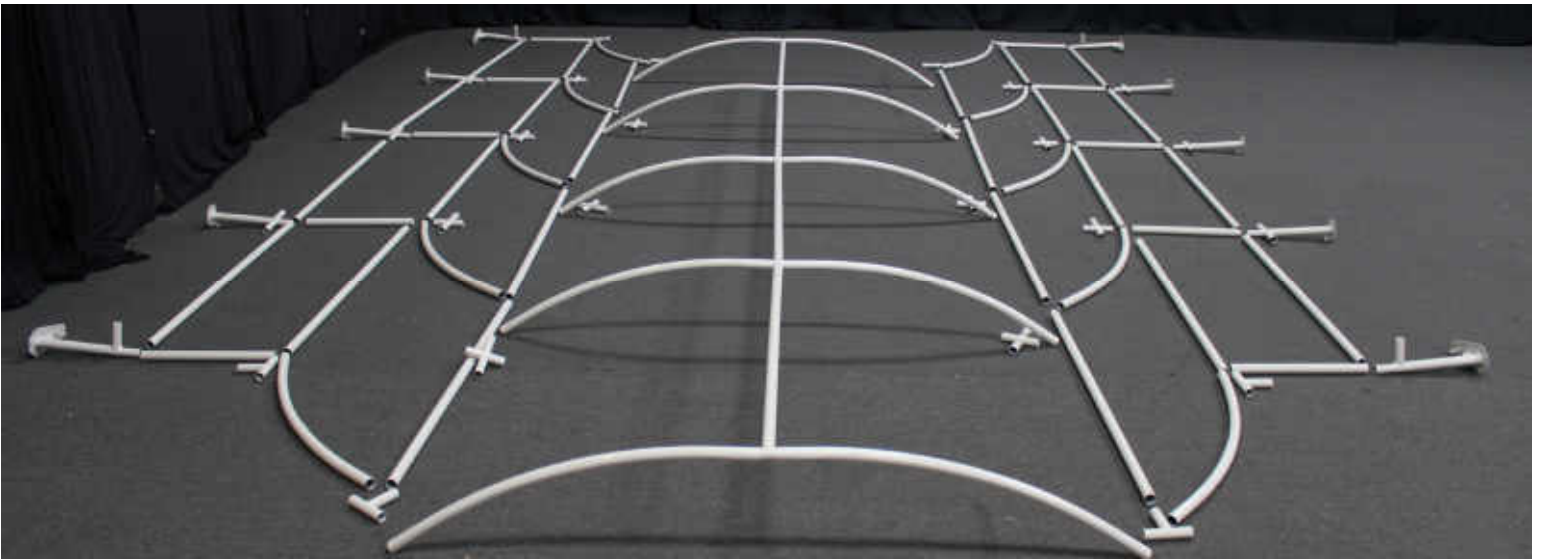


2) Assemble the center section of frame using the 3X9-15PC-C curved pipe and the 4X10-15PC 58" straight pipe. (See photo above) Make sure longest part of the 3-ways and 4-ways are used to form length. Continue assembly until you have four sections complete, which is the full length of the unit.



2) After assembling the first full length section of roof, use the rope enclosed to hold frame together by tying the frame from end to end down the center (See Photo Above and on Right).




FRAME ASSEMBLY

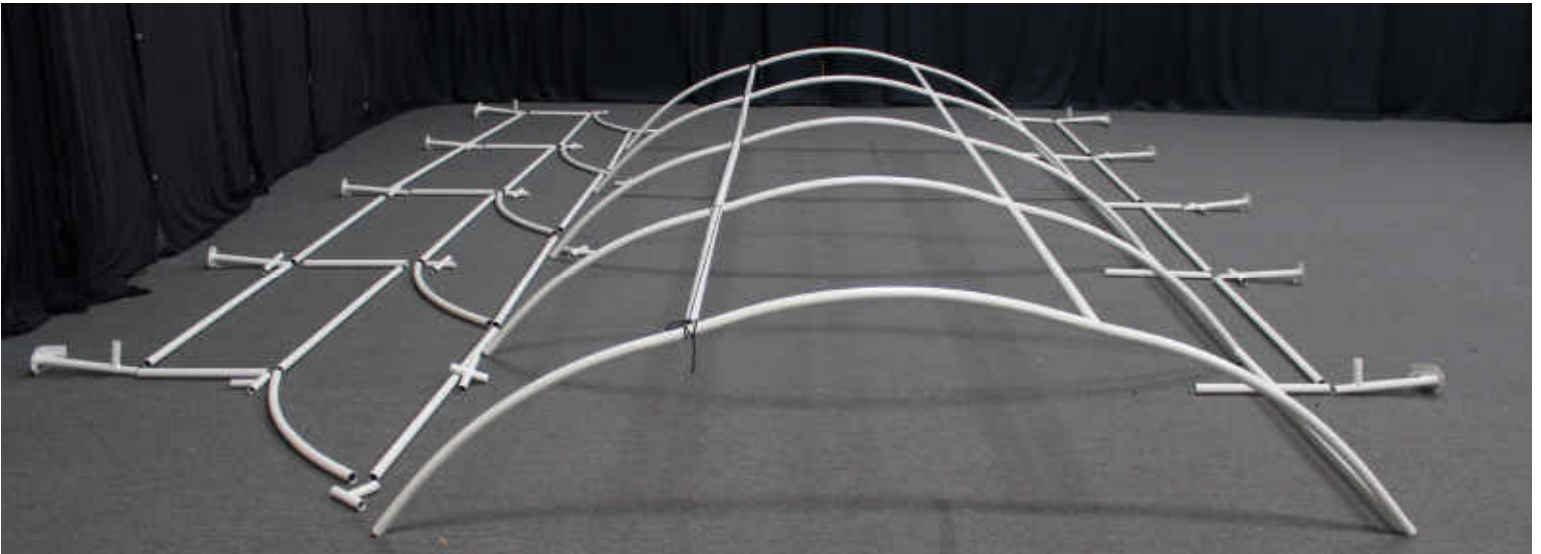

3) Continue assembly by completing the next curved section on each side of the top section. (See Photo Above) Hold frame together by tying frame from end to end like in step 2 before.

NOTE: PUSH FRAME INWARD FROM EACH SIDE TO KEEP CURVE SHAPE.

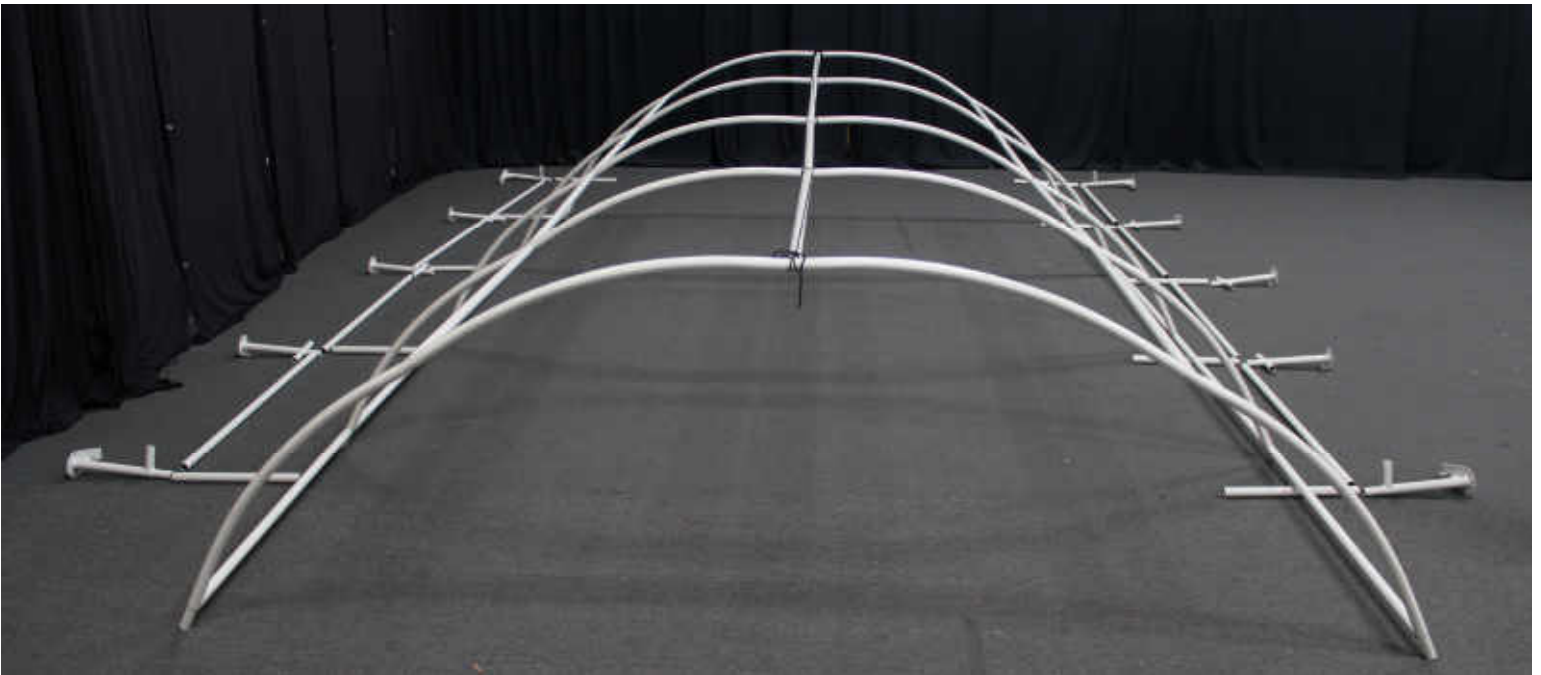

4) Once you have completely assembled all the curved sections of the canopy, (See Photo Above) you are now ready to put the cover on. Put the cover on before assembling the last section with feet. See next step.

COVER & LEG ASSEMBLY

5) Remove the cover from plastic bag and unfold. Next fold half the cover over the other half with the white side out. Match the corners (See Diagram F) and mark the top center of cover at the grommet line at both ends. (See Diagram G).

Diagram F



Diagram G



Diagram H

6) Once centers have been marked at both ends, pull cover over frame with white side down. (See Diagram H) Position the center mark with the top center pipe of frame. (See Diagram I) Attach cover to each end of top curved frame by running ball bungee straps through each grommet hole, around pipe and hook back over ball. (See Diagrams J and K)



Diagram I



Diagram J



7) Once you have secured the cover to the curved section of frame, you may now finish frame assembly. Assemble the remaining frame on each side using the 2X10-15PC pipe, foot sections, and 4X10-15PC pipe as shown in Diagram K. Make sure hooks on the feet are on the inside of frame. Push in on leg sections and make sure the legs are securely set on ground before assembling final side and standing canopy up. This will keep the canopy from sliding.

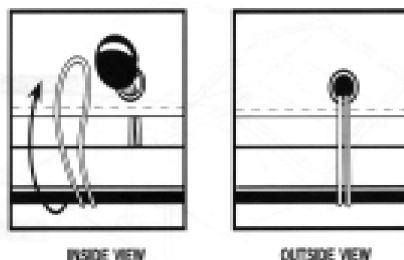


Diagram K




COVER & LEG ASSEMBLY

8) Now that you have completed the frame assembly and your canopy is standing, take the cables provided and hook one end to each foot (See Diagram L) over to the foot on the opposite side. You may have to push out or pull in to get cables hooked. Make sure cables are tight across. These cables keep the canopy frame with the designed curved shape.

(NOTE: Be careful NOT to trip over cables.)

Diagram L

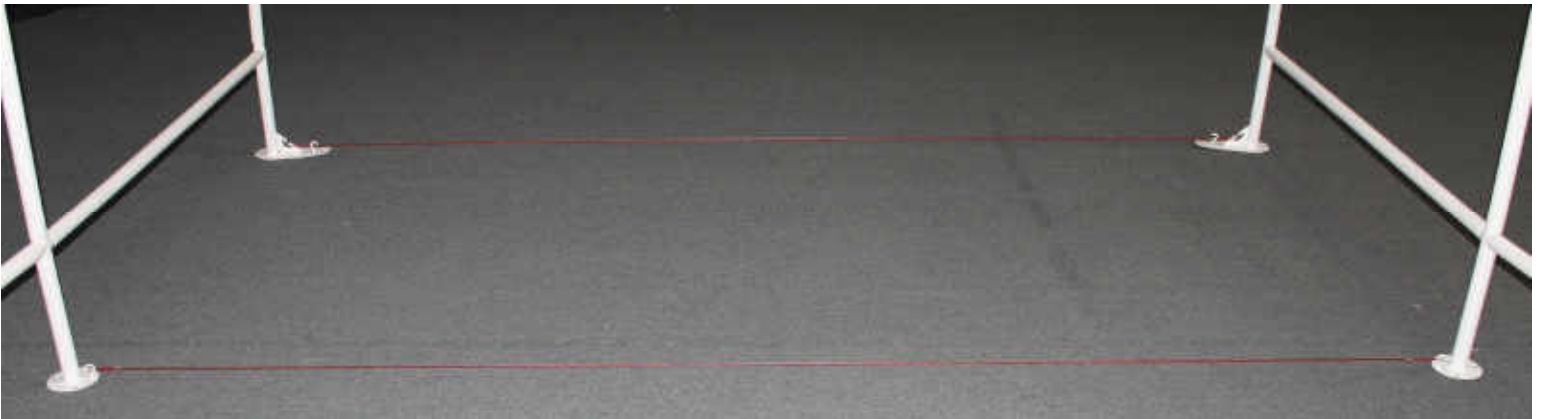

9) With the canopy standing and cables in place, anchor the canopy using the foot stakes provided (See Diagram M). Driving the stakes in at an angle will help anchor the canopy more securely. Once stakes are in place, you may remove the cables.

Diagram M

SEE "ANCHORING YOUR CANOPY"



COVER & END WALL ASSEMBLY



Diagram N

10) To complete your canopy, secure the top down each side on the bottom pipe and around each end with ball bungee straps. (See Diagram N)

11) Add the canopy endwalls using the hook & loop straps by securing them around the frame pipe. Next, tighten and secure the drawstrings at each corner foot. You have successfully set up your canopy (See Diagram O). Now that the canopy is set up, you may remove the ropes used for assembly.



Diagram N

COVER & END WALL ASSEMBLY

Diagram O



NOTE: Your canopy sidewalls and rear endwall are long enough to be buried in the ground. This will help prevent water from running inside.

ANCHORING YOUR UNIT

This canopy is designed for use as a temporary structure. After assembly, the canopy **MUST BE** securely anchored to the ground to prevent damage from winds. Your canopy will act like a kite in the wind if not properly and securely anchored to the ground. Severe winds will cause the frame to twist and unanchored legs will fall, thereby collapsing the canopy. If severe winds are expected, you must remove the cover from the frame to prevent damage.

Parts Enclosed > 6-screw-in anchors with cable and clamp attached
(Tools needed = 5/8 inch wrench and large heavy-duty screw driver)

1. We recommend anchoring your canopy at each corner foot and center foot on each side. Screw anchor into ground next to canopy foot using a large screw driver as seen in Diagram A. Looping the cable through the anchor eye will keep it out of the way while turning. Tilting the anchor slightly will help the anchor to cut into the ground. Apply downward pressure while turning the anchor into the ground. Leave approximately three inches of anchor out of the ground.
2. Unloop the cable from the anchor eye and slide the clamp onto cable. Run cable around the pipe, (See Diagram B) and then back through the clamp as seen in Diagram C. Pull the cable as tight as possible through the clamp. Hold the cable and tighten clamp with a 5/8 inch wrench or some type of adjustable wrench.
3. When you have tightened the clamp and satisfied that the cable will not slip, you may tighten the cable more by turning the anchor further in the ground as seen in Diagram D.

Diagram A



Diagram B



Diagram C



Diagram D



If you have further questions call our customer service department toll free at 1-800-800-6296

IMPORTANT NOTICE: PLEASE READ CAREFULLY

Shipping, Return, and Warranty Policy

Customer Service

8:00AM - 5:00PM EST | Monday - Friday 1.800.800.6296 | Information@kingcanopy.com

Shipping Policy

Most items ship within 24 hours to 48 business hours. Your item(s) are expected to be delivered within 3–5 business days after the items have been shipped and picked up by the delivery carrier. Business days don't typically include weekends however, Saturday deliveries may occur in select ZIP codes.

Standard shipping rates apply to the 48 contiguous states only. A physical street address is required to receive items. We do not ship to P.O. boxes, freight-forwarding addresses or International. Alaska, Hawaii, and Puerto Rico require 1-Day or 2-Day service and may incur additional fees. All other U.S. territories are considered international.

Shipping charges are calculated on a "per order" basis. They are calculated based on the box dimensions and weight to your zip code. Shipping cost may fluctuate.

Missing/Defective Parts

We try our best to eliminate any defective parts that are shipped with our products. Carefully inspect all packages upon arrival and report any missing or defective items upon receipt. Any discrepancies must be reported to King Canopy within 30 days of purchase. Please be sure to take a few minutes to match all items in the box to the items on the product manual. If there should be any missing or defective items, we will ship them free of charge. You will need to email information@kingcanopy.com. In your email, please send a copy of proof of purchase showing the date of purchase, photos of damage boxes and product, list of missing or damaged items and shipping address to send parts to. Your replacement will be shipped free of charge by ground shipping. Next day or express shipping will require freight collect and paid for by you. Damages from improper anchoring, strong winds, snow, ice, or rain are not considered defects. Nor does it apply to damage directly related to abuse or neglect, whether accidental or deliberate.

Limited Warranty

All of our canopy components feature a limited warranty for a certain period of time depends on the product you purchase (1 year on King Canopy, 90 day on Value King, 30 days on Tarpaflex) and are warranted to be free from defects in material and workmanship during this time frame. You will need to email information@kingcanopy.com. In your email, please send a copy of proof of purchase showing the date of purchase, photos of damage boxes and product, list of missing or damaged items and shipping address to send parts to. Damages from improper anchoring, strong winds, snow, ice, or rain are not considered defects. Nor does it apply to damage directly related to abuse or neglect, whether accidental or deliberate.

Defective Returns

If you receive a product that is defective and you wish to return it, please contact our customer service department to receive a return authorization number. All items will be passed through quality control before issuing a credit. You will be contacted upon receipt of your returned merchandise and notified whether your return is accepted or not. If not, you will have the option to receive the product back at your expense.

Improper Anchoring, Strong Winds, Rain, Snow, Ice

King Canopy/ PIC America, LTD. does not guarantee these canopies under strong weather conditions (including snow & ice) under any circumstances. These canopies are designed to protect against damages caused by sun, light rain, tree sap, birds, etc. they are not designed to hold roof loads

that accompany snow, ice, or heavy rains. If your canopy is anchored incorrectly and is blown away, we will not send any free replacement parts for damages. If you know strong weather is predicted- remove the cover or take down the unit completely. The cover is designed to be quickly and easily removed.

Non-Warranty Replacement Parts

If your warranty expires and you need replacement parts & they can't be found on www.kingcanopy.com, please contact us at 1.800.800.6296. We stock

customer service department will be pleased to assist you in any way possible.

Certain regions of the country are extremely harsh on canopy covers. Normal wear & tear is not covered under warranty, and should be expected.

In order to receive a discounted or free replacement part, you may be asked to return the part, freight, prepaid, to our warehouse for inspection before we will send a replacement. You must, in all cases, provide a copy of your receipt showing the date of purchase, model number and price.

Return Policy

All returns will require a return authorization number (RA). To obtain an RA, please contact our customer service department at 800.800.6296. All returns must be submitted within 30 days of purchase date, located on receipt. Any returns submitted after 30 days without an RA number will not be accepted. Credit will be issued upon receipt of product and inspected for damages or excessive wear and tear. The full amount of the product will be credited in the form of original payment minus a 25% restocking fee and shipping and handling.

Safety & Care Information

Always use your best judgment.

Do NOT use canopy as a permanent cover. Temporary use ONLY. Damages due to weather conditions are not warranted.

Do NOT set up on a steep incline.

Never set up in windy, rainy, or snowy conditions. Canopy is not intended to serve as protection from such conditions. Use for shade only. Disassemble and properly store your canopy after each use.

Do NOT let snow or rain accumulate on top. Always use an anchoring system.

Keep your canopy away from all fire sources.

Do NOT machine wash your top. Mild soap & water with a brush while the canopy is open without the legs extended. Do NOT use harsh detergents or abrasives.

Do NOT put away your Instant Canopy while wet or damp. This promotes mildew. Store DRY.

For best results in keeping your top clean and avoiding small tears, it is recommended that top be removed and stored in carry bag after each use.

Never leave your canopy unattended!

WARNING: Keep all flame & heat sources away from this tent fabric. This tent is made with fabric that meets CPAI-84 Section 6 & NFPA 701 specifications for flame resistance. It is NOT fire proof. The fabric will burn if left in continuous contact with any flame source.