


INSTRUCTIONS - 2 Persons Recommended



1) Remove and Layout All Box Contents on the Ground.



2) Place Frame Where You Want to Set Up.

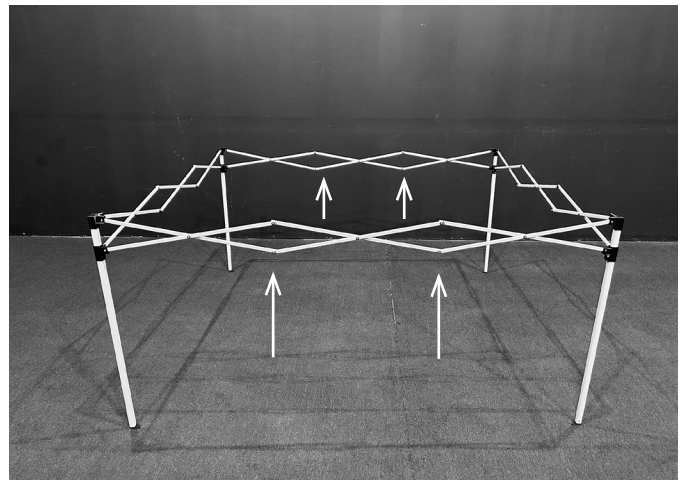



3) Open Frame by Pulling it Apart at the Center of the Lower Truss Bars. Do this by Standing On Opposite Sides and Walking Back While Pulling Frame Open. Snap Corner Lock Fittings into Place by Pushing Slider Fitting Up While Holding Top Corner Down with Your Other Hand.



4) Assemble the Roof Rods by Inserting One Into the Other at the Corded Joints.



5) Insert the First Rod into the Corner Fitting and then Insert the Other End of the Rod at Opposite Corner Fitting.

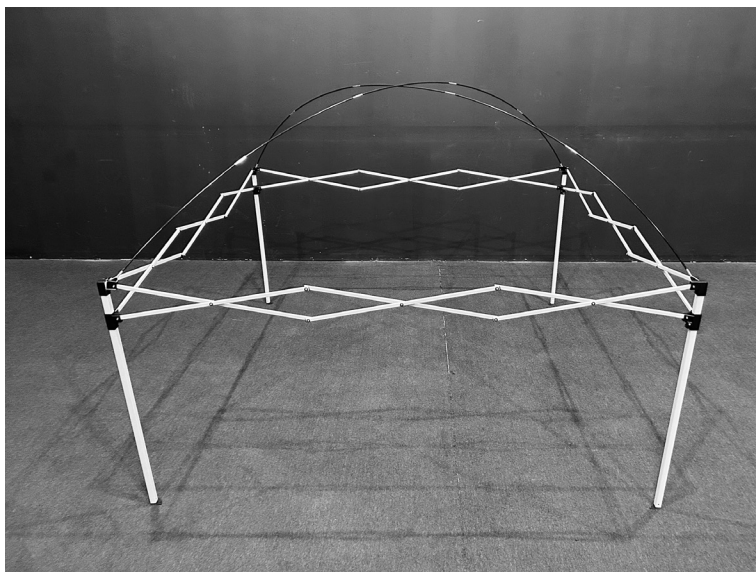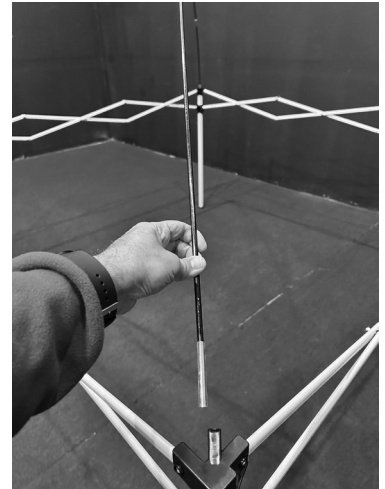

6) Insert the Second Rod, Cross Over the First Rod and Insert Into the Fitting at the Opposite End.





7) Drape the Cover Over the Assembled Frame, Positioning it with the Seams at the Corners.

INSTRUCTIONS - 2 Persons Recommended



8) Once all the Corners are Positioned Correctly, Walk Under the Tent and Proceed to the Next Step.

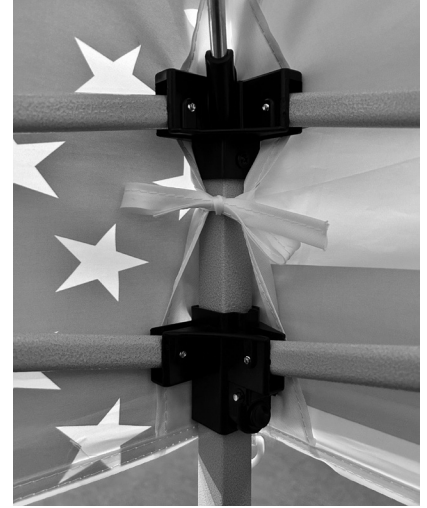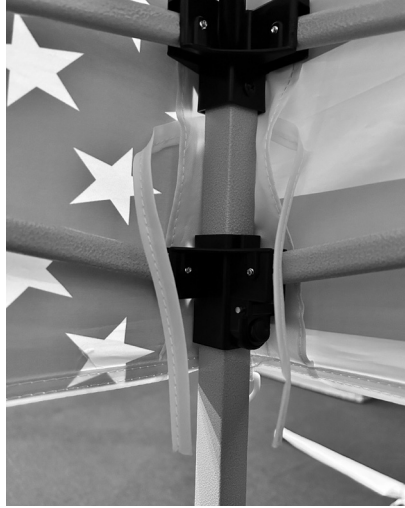

9) Locate the Corner Tie Straps and Proceed to Tie the Straps Around Each Leg Below the Top Corner Fittings at all Four Legs.



10) Tie the Strap at the Center Peak and Attach the Hook and Straps around each of the Four Roof Rods.



11) Place Foot on the Foot Pad and Begin Extending The Legs Until The Snap Button Locks.

